10.1" PORTABLE MONITOR Full Function TYPE-C



USER MANUAL

Foreword

Thank you for purchasing our 10.1-inch portable monitor. Please read this manual carefully before using the unit. Have a great experience!

Caution

- 1. Do not use a damaged or loose plug. This may cause an electric shock or fire.
- Do not pull the plug out by the wire or touch the plug with wet hands.
 This may cause an electric shock or fire.
- 3. Do not excessively bend the plug and wire nor place heavy objects upon them, which could cause damage.
- 4. Disconnect the plug from the outlet during storms or lightening or if it is not used for a long period of time. Failure to do so may cause an electric shock or fire.
- Put your monitor in a location with low humidity and a minimum of dust.
 An electric shock or fire could result inside the monitor.
- 6. Do not drop the monitor when moving it. This may cause damage to the product or human body.
- 7. When cleaning the monitor case or the surface of the IPS screen, wipe with a slightly moistened, soft fabric.
- If your monitor does not operate normally in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact after sales or the professional technical staff.
- 9. For each hour of looking at the monitor, you should let your eyes rest for 5 minutes. This will reduce eye fatigue.

Key Feature

- \bullet 1280x800 HD IPS , 280cd/m²
- Slim design and lightweight, easy to carry on-the-go
- OSD button operation, simple and intuitive
- Full function of Type-C1 and Type-C2 ports for power supply, display and touch
- Widely compatible with Smart Phone, PC, Mac Book, Switch, etc.
- Type-C3 port can connect to keyboard or mouse to the monitor.
- Plug and play. No additional installation or software necessary.
- Built-in dual stereo speakers

CONTENTS

1.Product Structure and Instruction	3
2. Ports Connection	4
3. Supported Phone Model	4
4. Button Shortcut Operation Instructions	5
5. Menu Operation Instructions	6
6. Menu Function Instructions	7
7. Product Parameters	9



1. Product Structure and Instruction

Number	Function Instruction	Number	Function Instruction
1	3.5mm audio input	8	EXIT Return/exit the menu
2	Туре-С1	9	Ċ

Video/Audio input, power supply			Long press to Turn ON/ OFF
			power
			Indicator Light
0	Type-C 2	10	Green color : detected
3	Video/Audio input, power supply		input signal
			Red color: w/o input signal
	Mini HDMI	(11)	Type-C 3
(4)	Video/Audio input	\bigcirc	Connect with keyboard/ Mouse
Ē	MENU	(1)	Spoakor
9	Setting, Confirm		Speaker
	>		
6	Backlight shortcut press(OSD w/o	(13)	Speaker
	display); Increase, Next		
	<		
7	Volume shortcut press (OSD w/o		
	display; Decrease, PREV		

2. Ports Connection



Note: Phone for IOS system, MAC notebooks (without HDMI interface)

need to use adapter devices, such as Lightning to HDMI cable

HUAWEI	Mate10, Mate10 Pro, Mate20, Mate20 Pro, Mate20 X, Mate30, Mate30 Pro, P20, P20 Pro, P30, P30 Pro, P40, P40 Pro
HONOR	Honor Note10, V20

3. Supported Phone Model

SUMSUNG	S8, S8+, S9, S9+, S10e, S10, S10+, S20, S20+, Note8, Note9, Note10, Note10+, A90 5G, Galaxy Fold, Galaxy Fold2 5G, Tab S4, Tab S5e, Tab S6
RAZER	Razer Phone, Razer Phone2
LG	G5
ОРРО	R17 PRO
ASUS	ROG Phone
нтс	U Ultra
SMARTISAN	R1, Pro2S

Tips: the smartphone can be compatible which equipped with USB-C port

and supports DP output function , not limited to the listed models.

4. Button Shortcut Operation Instructions



Press > key to bring up the backlight adjustment item, press the <I> key to adjust the analog value, after the adjustment, press **EXIT** key to exit.



Press < key to bring up the volume adjustment item, press the $\langle I \rangle$ key to adjust the analog value, after the adjustment, press **EXIT** key to exit.



Press **EXIT** key to bring up the Input , press the <*I*> key to select the

signal input, press Exit key to exit

5. Menu Operation Instructions

- Use the USB-A to USB-C cable to connect the monitor to the power supply. After the power is turned on, the indicator light turns red, the indicator lights up green after connected the signal.
- ②.Press the **MENU** key to enter the menu bar, use the $\,<\,$ or $\,>\,$

key to select the menu item, and press the **MENU** key confirm to enter the secondary menu.

③. After entering the secondary menu, use the < or > key to select the adjustment item. Press the MENU key to confirm and enter the adjustment item, use the < or > key to adjust the parameter value. After adjustment, press the EXIT key to return to the previous menu, and then enter the next step of selection and adjustment.

Note: The menu can only be operated when a signal is connected.

6. Menu Function Instructions



Backlight	0~100
Brightness	0~100
Contrast	0~100
Sharpness	0~4



Temperature	9300, 7500, 6500, 5800, sRGB, User
	Under the User, the Red, Green and Blue of the image can be

	adjusted. Red (0~255), Green (0~255), Blue (0~255)
	(Use the $\langle I \rangle$ key to select the User, and then press the MENU
	key to enter the User .)
Color Effect	Standard, Game, Movie, Photo
HUE	0~100
Saturation	0~100



Aspect Ratio	Full, 16:9, 4:3, 5:4, 1:1
Over Drive	ON , OFF , OD Gain 0 \sim 100
DCR	ON , OFF



Input	Auto Select, D1: TYPE C , D2: TYPE C, D3: HDMI
-------	--

Audio	
Volume	0~100
Mute	ON , OFF



Language	English, 中文, Français, Deutsch, Español, Italiano, 日本語
Menu Time	10~60s
OSD Transparency	0~255
Reset	Press the MENU button to reset, it will restore the factory default
	parameter settings.



Information	View the corresponding screen input source information.
	(Press the MENU key to enter the Information menu to view.)

7. Product Parameters

Panel Size	10.1"
Whether Touch	Type-C full-featured ports support touch operation
Resolution	1280x800 pixels
Aspect Ratio	16:10
Pixel Pitch	0.1692(W) x 0.1692(H) (mm)
Brightness	280cd/m ²
Contrast	900:1
Viewing Angle	80°/80°(L/R) 80°/80°(U/D)
Backlight	LED
	Type-C, Mini HDMI
Input	Note: please use 5V/3A TYPE-C power supply at least
Audio	3.5mm Stereo Headphone, Speaker

Refresh Rate	60Hz
Power Consumption	≦6W
Unit Size	242Lx152Wx18.8H (mm)
Unit Weight	650g
Working Temperature	-10°C ~ 50°C
Storage Temperature	-15℃ ~55℃

8. Q&A

1. Why does the DH101 connected the power, but the screen showing no signal, power saving and off?

Answer: Please make sure input signal and the smartphone model is in supporting range . (the smartphone must with USB-C port and support DP output function)

PS: If the smartphone's USB-C power supply cannot support DH101 running.

Try connecting the DH101 to an independent power supply.

2. If you intend to use DH101 for watching movies or gaming with 16:9 aspect ratio, but why by default it stretch your video game to fill the screen? Answer: The screen ratio of DH101 is 16:10, when you input other ratio signal, the screen will stretch. You can set the aspect ratio to 16:9 via menu setting (MENU--Advance--Aspect Ratio).

3. Connected the power, but why the menu can' t be set?Answer: The menu set only can be operated after the signal input.

4. How to set the portrait mode?

Answer: The screen of DH101 can't rotate automatically. But you can set the portrait mode via PC or laptop. Take Windows 7 as an example:

Start--Control Panel--Appearance and Individuation--Display--Adjust Screen Resolution--Direction

Remark:

★ As we are improving product features and product performance, so if there is any change on the specification without prior notice.